www.airsoft-innovations.com



Scan to subscribe to our newsletter and receive exclusive offers and the latest news on new and current products.

We at Airsoft Innovations stand by our products.

Featuring **USER MANUAL** AIRSOFT NINNOVATIONS

http://support.airsoft-innovations.com **Dealer inquiries:**

wholesale@airsoft-innovations.com







1. REMOVE SAFETY COVER

DEPLOYMENT

6₀6

NIW OT

LAUNCHER

2. INSERT INTO

3. ВВВВВТ

MASTER AND MIKE


GAS POWERED SHELL

GUNGAS KIT

widely available propane. your grenades and GBBs with inexpensive, GunGas Kit with Oil pump to lubricate and fill We recommend using the Airsoft Innovations

green gas or duster gas (HFC134A) using the Alternately, you can fill your grenade with

Propane Adaptor duster adaptor included in the GunGas Kit.

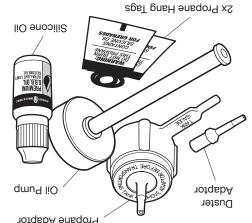

GRENADE OIL MEDIUM 30WT SILICONE OIL CEAL FOR GERINGE UBERCATION Firing pin safety cover User manual


Assumption of risks: there is a serious risk of personal injury, death or property damage arising out of the use

or misuse of this product. By using this product, you agree to freely accept and fully assume all such risks.

40 Mike (240 FPS Propane, green gas, duster gas, 134A OR 100 BBS 220 FPS Grenade Oil

KIT CONTAINS



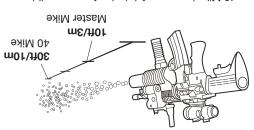

and enjoyable for all involved. engagement distance to keep the game safe players. Please observe a 30ft/10m minimum 40 Mike is a powerful device for responsible

distance is 10ft/3m. Master Mike's minimum engagement

MAINTENANCE

or other significant moulding detects. Pellets should not have severe parting lines passages of your 40 Mike/Master Mike. proken pellets which may jam the feed Use good quality pellets free of debris or

SAFETY

attixing its firing pin cover.

wear full coverage goggles

Mike by removing it from your launcher and

off the field. Disarm your 40 Mike/Master

when handling your launcher on the field and

eye protection. Observe sate direction rules sate zone where players may not be wearing

3. Protect your fellow players when entering the intentionally aimed at another players' head.

used within 10 feet (3m). It should also not be

than 30 feet (10m). Master Mike should not be ayonid not be used to fire upon players closer

2. 40 Mike is intended for longer ranged fire. It

Shooting glasses are NO1 adequate eye


1. This product fires many projectiles at

brotection for airsoft play. All players should

considerable muzzle energy and at a high rate.

PRIMARY WARNINGS

- 1. Do not fill with high pressure gases such as CO2, HPa, Nuprol 3.0, Nuprol 4.0.
- 2. Do not fill or deploy this product near sources of flame or other sources of ignition.
- 3. Do not expose this product to temperatures exceeding
- 40C/104F. 4. Do not use this product if it
- is damaged.
- 5. Do not modify this product or attempt to defeat its safety features.
- 6. Read this instruction manual completely before using. Keep reading!

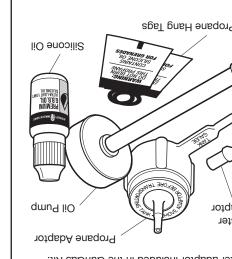

MAKE SAFE \

APPLY FIRING

Slide Firing Pin Cover

over the back of your

ensure that it cannot

Always reapply firing pin

cover when entering the

grenade. This will

be fired during the reloading process.

loader to load BBs

into grenade.


safe zone.

PIN COVER

Firing pin

safety cover

DETAILED PARTS GLOSSARY

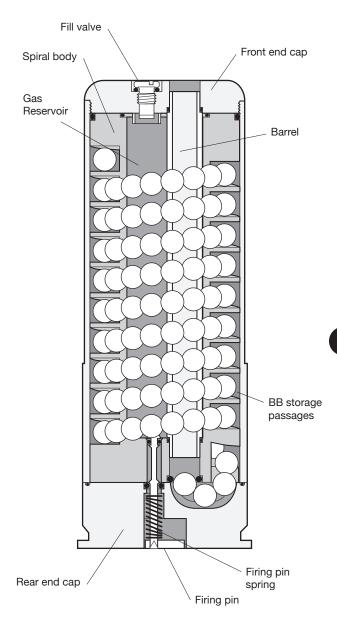

DO NOT DISASSEMBLE UNIT!

Device requires special tools to assemble properly. If you are having problems, contact us for help! support.airsoft-innovations.com

FILL WITH GAS

FILL GAS

Fill grenade using Propane, Green Gas or Duster Gas (HFC134A).

 
WARNING

High pressure propellants such as CO2, HPa, Nuprol 3.0, Nuprol 4.0 should not be used to power this product. High pressure propellants will damage this product, void your warranty, make your grenade unsafe.



0

NOTE: Fill valve will sound as though it is leaking while you are filling the device. This is normal. Fill device with propellant bottle pointing down. Wait until a mist of liquid propane is emitted from the fill valve, normally this takes approx 5 seconds of filling.



When there is resistance, cover barrel with finger, turn grenade upside down and twist grenade back and forth to allow BBs to descend down the spiral magazine.



Continue loading BBs until grenade is full. Repeat steps 2-3 until full.

BBs will stop rattling when grenade is full.

4. CLEAR FIRING BARREL

Dump loose pellets out of barrel.

Your 40 Mike/Master Mike is now ready to use.

