

G·S·G

AIRSOFT



BEDIENUNGSANLEITUNG



OPERATING MANUAL



MODE D'EMPLOI



 
INSTRUCCIONES DE USO

GSG G14

ELECTRIC-SERIES




- Warnhinweis:** Lesen Sie vor Gebrauch die Bedienungsanleitung sorgfältig durch.
Das Tragen einer Schutzbrille wird empfohlen.
- Warning:** Carefully read through the operating manual before using the product.
Wearing safety glasses is recommended.
- Avertissement:** Lisez attentivement le mode d'emploi avant toute utilisation.
Le port de lunettes de protection est recommandé.
- Aviso:** Antes de su empleo, lea atentamente las instrucciones de uso.
Se recomienda llegar gafas de protección.

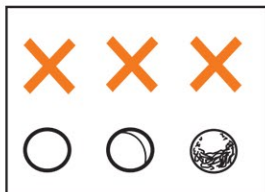

Use of the correct ammunition

 Never use previously used, deformed, dirty, inferior or damaged BBs. Failure to observe this requirement will result in voiding of the warranty.

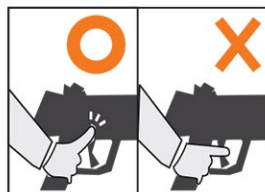


Safety of the weapon

The weapon should always be locked by the safety catch. Unlock the weapon just before firing and reload it after the last firing.



Holding the weapon correctly

 Always hold the weapon vertical and not horizontal when firing. When the Hop-Up system is activated, the BBs can fly on a curved path and injury non-participating people.

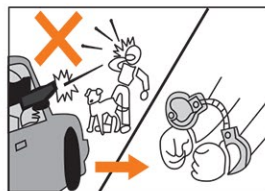

The weapon in public

Never point the weapon in public. This can irritate non-participating people and provoke a police intervention. By so doing, you are violating the applicable weapons law and are subject to criminal prosecution.



 
The weapon in the locked state

If the weapon is in the locked state, you should not forcefully operate the trigger. This can result in serious damage.



Muzzle direction

Always and at each moment be attentive to the direction in which the muzzle is pointing. People can inadvertently be injured by it.

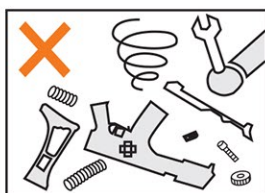

Tuning the weapon

Modifications for increasing the power of the weapon may only be made by authorized technical personnel. Observe the respective applicable legal framework for the country in which you are located.



 
Negligent use of the weapon

If you hold the weapon in your hands, you should always concentrate exclusively on the weapon. Negligent behavior may result in grievous injuries.




Aiming

Never aim at people or animals.

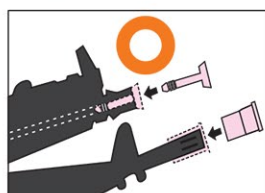

Muzzle cap

 After each use, the muzzle cap should be put back on the muzzle in order to prevent undesired firing. (not included in the scope of supply)

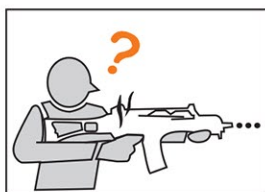

Before initial use

Before initial use, odors may emanate from the weapon. This is normal and will subside with increasing time.



 
Transporting the weapon

Always transport the weapon in a closed container. Pointing the weapon in public is a violation of the prohibition on brandishing weapons.




Muzzle

Never look directly into the muzzle of the weapon. A shot can be fired at any time and cause an injury.

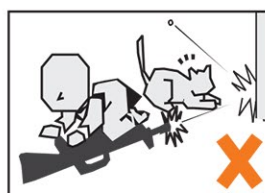

Unauthorized persons

 Always keep the weapon out of the reach of children and unauthorized people.

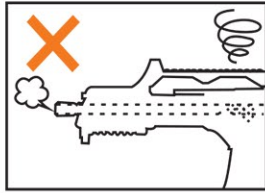

The first shots

If you have inserted the magazine, it takes a little time before the first BBs are fired. The BB's must first be supplied to the weapon.



 
Removing the magazine

After you have removed the magazine, there are still BBs in the chamber. Always check the weapon thoroughly to see whether the cartridge is empty.



Shooting in a safe location

Use the weapon only at a safe location, where it is ensured that the BBs do not leave the property and no non-participating persons are injured.

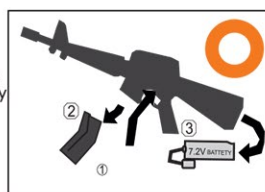

Safety measures

After the shooting has ended, you should always remove the magazine from the weapon, detach the battery from the weapon and set the safety lever on „Safe“.

COMPONENTS



Designation:	GSG G14
System:	S-AEG (Semi Automatic-Electric-Gun)
Caliber:	6 mm BB
Weight:	2.820 g
Overall length:	676 - 760 mm
Barrel length:	260 mm
Magazinkapazität:	45 Schuss
Energy:	1,37 Joule
Free starting at:	18 years
Battery: (not incl.)	Li-Po 7,4 V-1.300 mAh (small terminal)
Article Nr.:	204397 (black) 204398 (Dark Earth)

SCOPE OF SUPPLY



GSG G14
cleaning rod incl.
loading rod incl.

SAFETY



Weapon locked



**Weapon not locked
(single shot)**



**Weapon not locked
(burst of fire)**



**Weapon not locked
(continuous firing)**

Locking and shooting

The weapon can be unlocked on the right or left side of the gripstock. There are four positions into which the lever can be moved. In the bottom position, the weapon is locked, located above it is a single shot position, above it the burst of fire and in the top position continuous firing. (The burst of fire and continuous firing positions are prohibited in Germany and therefore may only be used in single shot mode.) Only unlock the weapon just before firing. After shooting, the weapon is to be locked immediately.

LOADING PROCEDURE



1. Push the magazine lever forward to remove the magazine from the weapon.



2. Set the loading rod filled with BB's on the empty magazine shaft.



3. Now push the BB's into the magazine using the supplied rod.



4. Insert the magazine back into the weapon. It is locked if you have heard a „click“.

 
INSTALLATION OF THE BATTERY




1. The battery is inserted in the handguard.




2. Push the pin out of the weapon from the right.

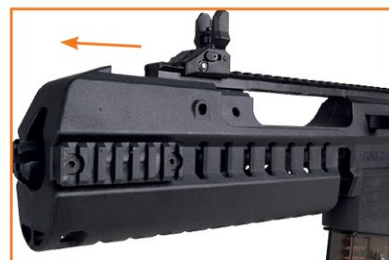

 3. Pull the handguard forward to remove it from the weapon and connect a battery to the weapon with a small terminal.

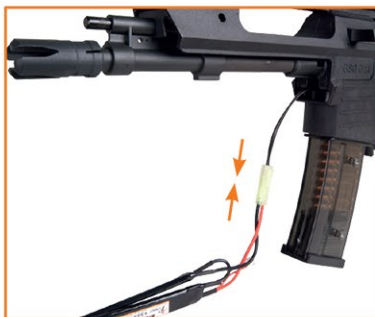

 4. Insert the battery in the front shaft and lay the cable in such a way that it does not get damaged. Connect a battery to the weapon with a small terminal.

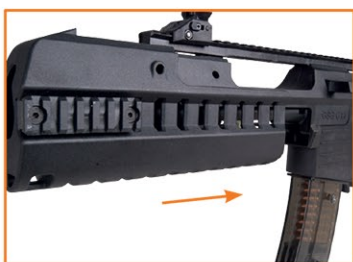

5. Carefully push the handguard back onto the weapon. Make sure that the position in the guide rail is correct.



6. Lock the handguard with the pin from the left side out.

ATTENTION:

- Batteries must not be heavily discharged, or else the individual cells are damaged.
- Longer overcharging causes permanent damage to the battery.
- No guarantee can be made for batteries because they are wear parts.
The use of a Li-Po battery with 7.4 V is recommended.
- Unusable batteries do not belong in the domestic waste, but must be disposed of separately.

 
THE FLIP-UP SIGHT



1. The sight can be flipped up with a push of the button. A button is located on each side of the sight.



2. The sight is not adjustable.

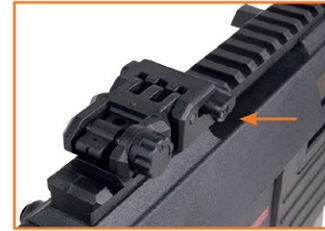


3. The hole notch can be flipped up with a push of the button. A button is located on each side of the sight.



4. The sight can be calibrated at the side of the adjustment wheel. Turn to the left and the hole notch move to the left and vice-versa.



 5. The hole notch can be folded down so that you can select from 2 different sizes of hole notch. The large hole notch is for short distances and the small one for targets that are more distance.

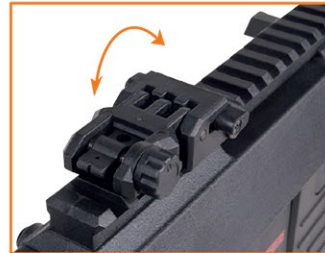


6. Flip both sights down with the finger after firing.

ADJUSTMENT OF THE HOP-UP



 1. The hop-up is located in the bottom window of the sleeve ejection. Pull the tensioning lever back to get to the adjusting wheel of the hop-up.

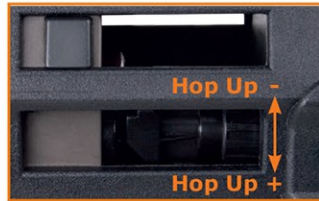


2. Turn the dial to make the desired change.



3. Push the bolt-catch button with the discharge window open to lock the window.

 4. The hop-up is ideally adjusted if the BBs fly as far and straight as possible. If the hop-up is set too strong, the BBs fly upward; if the hop-up is set too low, the BBs fly downward. Before you clean the weapon, you should expose the hop-up completely to prevent damage to the hop-up.

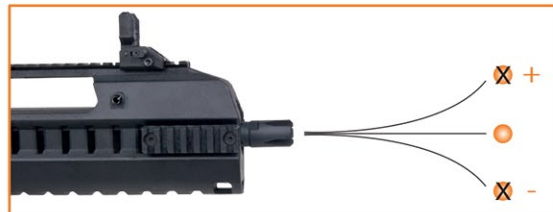

THE COCKING LEVER

1. The clamping lever can be operated from both the left and right sides.
2. Push the clamping lever from the respective opposite side into the desired position.
3. You can repeat this procedure as often as you like.



ADJUSTING THE STOCK



1. The lock for the stock is located in front of the shaft cap and must be pressed from both sides to adjust the stock to the desired length.



2. The stock can be locked in 5 positions. If the stock is in the desired position, release the locking knobs to lock the stock.



3. The stock can be set to a length of 205 - 285 mm.

CLEANING THE WEAPON



1. Cut a strip of cotton 6 cm long and 1 cm wide.



2. Wind the strip of material around the end with the hole on the supplied cleaning rod.



3. Spray the cotton strip with silicone spray.

 


4. Introduce the end with the material strip into the barrel from the front with a rotational movement. To do this, remove the muzzle beforehand and expose the hop-up.



5. The rod projects another 35 cm from the barrel.

PROBLEM CORRECTION

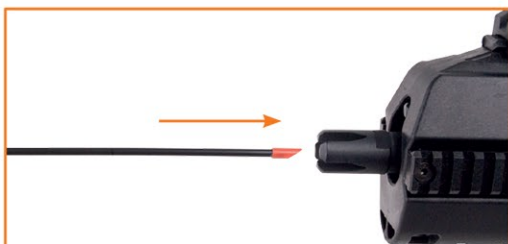

1. Should BBs lodge in the weapon, cease firing immediately in order to prevent damage to the weapon.
2. Introduce the cleaning rod into the barrel with the flat side down.



3. The clogged BB's comes out in the magazine chamber.

ATTENTION:

- Never forcefully push the rod into the barrel; this can damage the weapon.
- Regularly clean all of the important parts on the weapon with a cloth lightly soaked with gun oil.
- Never put gun oil directly into the barrel.
- Only use BBs offered by GSG to operate the weapon.





GERMAN SPORT GUNS

German Sport Guns GmbH

Oesterweg 21
D-59469 Ense-Höingen
Germany

Phone: +49 (0) 2938 97839-0

Fax: +49 (0) 2938 97890-31

info@germansportguns.de

www.germansportguns.de



- D:** Für diese Waffe gilt der gesetzliche Gewährleistungsanspruch von 2 Jahren auf Fabrikationsfehler.
Der Gewährleistungsanspruch erlischt bei unsachgemäßer Benutzung der Waffe, Benutzung falscher BB's oder Modifizierung der Waffe.
- GB:** The statutory warranty of 2 years against manufacturing defects applies for this weapon.
The warranty is voided if the weapon is improperly used, if incorrect BBs are used or if the weapon is modified.
- F:** Cette arme bénéficie d'une garantie légale de 2 ans contre les vices de fabrication.
Tout droit de recours en garantie s'éteint en cas d'utilisation inappropriée de l'arme, d'emploi de munitions inadéquates ou de modification de l'arme.
- E:** Respecto a esta arma se aplica el derecho legal de garantía de dos años sobre los defectos de fabricación.
El derecho de garantía quedará anulado si se emplea el arma de manera inadecuada, se utiliza munición BBs equivocada o se modifica el arma.