 


**● Load the BB bullet
装入BB弹**

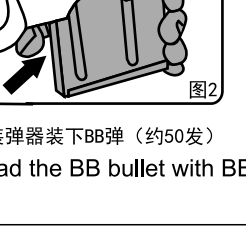

Release the mag
卸下弹盒

用装弹器装下00弹 (约50发)
Load the BB bullet with BB loader (about 50 bbs)

**● How to shoot
射击方法**

As the Pic.5 show, stir up the puller then pull back it until be loaded
如图所示, 将拉手向上拨, 然后用用力向后拉至上膛

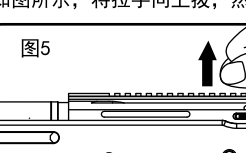 


图5

Install the Mag
装上子弹盒



图4


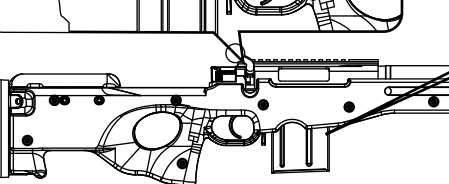 


图3

1. Install the mag.
装上子弹盒。
2. As the Pic.5 show, Stir up the puller then pull back it until it crack. At this motion the ipuller puller could not return by itself then push it back and revert the puller
如图5所示, 将拉手向上拨, 然后用用力拉到上膛听到一声“咔嚓”声音, 上膛装置已不能自然复位, 再反向操作, 推回原位
3. Attention:Never aim at a person or animal
扣动扳机, 发射00弹。(注意枪口不要对准人或动物)

● Adjust hop-up regulator BB弹调整器

 Adjust hop-up to keep the BB could shoot more far in the horizontal direction shootin
调整子弹调整器, 保持水平方向射击能00弹获得最远射程。

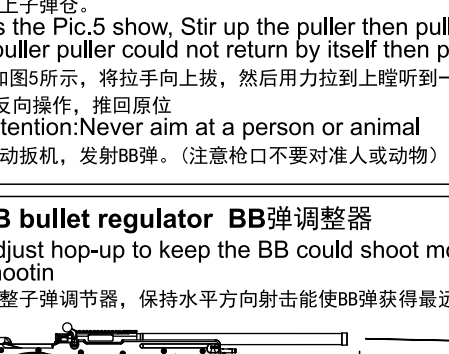


Hop-up (could be do I I y move)
子弹调整器

图6



警告

 Always wear eye protective gear. 玩枪时，请始终戴着眼保护装置。



当使用汽枪射击目标或游戏时，你和所有的参与者都必须戴着护眼眼镜或其它眼保护装置。同时要注意子弹的弹路方向。（而且要特别注意不能射向游戏者以外的第三者。）

You may be punished if you are shooting for a practical joke.
如果用汽枪开玩笑惹怒别人，可能会受到惩罚。



Never disassemble or modify the air gun. 避免拆除或修改该气枪。



Never look into the gun muzzle.
禁止直接目视枪口。

When shooting the air gun for a target or game, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. (Pay sufficient attention also to third personnel other than participants.)

You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

 
如果你损害公共的或私人的财产，或者伤害人或动物，即使你是在进行射击的游戏实践，你也会受到惩罚。

请始终守规定，享受有益健康的运动射击。

This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance. So, avoid dissembling or modifying the air gun.

该气枪是根据适当的性能和操作而制造的。拆除或改装气枪可能产生危险或者逆操作。因此要避免拆除或改装该气枪。

Never shoot at any human or animal.
禁止射击人或动物。



Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle.
不可把人或动物当作目标瞄准或射击。

- Please read the instructions carefully before use. (Please read the Notice in details).
- Please retain the instructions for future reference.
- Don't use it improperly or refill the air gun.
- 使用前请先完整阅读说明书（注意部分请详细阅读）
- 保存好此说明书以供日后使用参照
- 切勿误读使用或改装气枪

Users restricted to 18 years of age or older 使用年龄对象18岁以上

CM.703 AIRSOFT GUN

INSTRUCTION MANUAL

使用说明书

在操作之前必需读熟这些说明书
Always read through this manual before operation.

警告 WARNING

18岁以上才能使用
Only for 18 years
of age or older

Operation of this air gun for competition use is restricted to users of 18 years of age or older.

注意瞄准线
Injury caution

距离88 弹能达 95-140 米范围。不小心的射击可能会导致眼睛受伤或其它伤害。
Since plastic BB bullets reach 95 to 140 meters, careless shooting may cause eye damage or other injuries.

注意仔细阅读手册
Careful reading of
Handling cautions
and
Instruction manual

在操作之前要细心读警告手册和指示手册操作时也必须仔细阅读警告
Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation.
Operate the air gun with full recognition of warnings and cautions.

This exploded view diagram illustrates the assembly of a mechanical component, possibly a vehicle chassis or engine part. The main frame (105) features a central circular component (106) and is supported by a long horizontal shaft (25) with a pulley (26). Various smaller components, including bolts (101, 103), nuts (102), and a fan assembly (108, 109, 110, 111, 112, 113, 114), are shown in their relative positions for assembly. The diagram is labeled with numerous numbers (1-114) corresponding to the parts.

2. 外角螺帽	barrel cover	70.	后定位销压簧	drivingspring safety
3. 外角螺帽	bramp tip	71.	前定位销压簧	trigger safety spring
4. 外角螺帽压片	barrel seat	72.	扳机扣压簧	trigger spring
5. M3×8 KMHO	M3×8 KMHO	73.	扳机扣压簧	trigger roller coupling
6. 螺帽	gunner	74.	扳机扣压簧	trigger roller coupling
6. 扳机扣	gunner rubber	75.	扳机扣压簧	trigger right base
8. 扳机扣压片	gunner	76.	扳机扣压簧	2.5×11.5 KMHO
9. 扳机扣压片	gunner	77.	扳机扣压簧	pistol lock
10. 扳机扣压片	gunner	78.	扳机扣压簧	right body
11. 2×6 螺帽	gunner adjustment	79.	扳机扣压簧	Mag base
12. 扳机扣压片	gunner	79A. 3×10 PMHO	扳机扣压簧	3×10 PMHO
13. 扳机扣压片	gunner	80.	扳机扣压簧	Mag locker
14. 2×11.5 螺帽	2x11.5 螺帽	81.	扳机扣压簧	Mag locker spring
15. 扳机扣压片	gunner	82.	扳机扣压簧	Mag locker
16. 扳机扣压片	gunner	83.	扳机扣压簧	chit rest base
17. 扳机扣压片	gunner	84.	扳机扣压簧	stock nut
18. 扳机扣压片	gunner	85.	扳机扣压簧	fine adjustment base
19. 扳机扣压片	gunner	86.	扳机扣压簧	fine adjustment adjustment O-ring
20. 扳机扣压片	gunner	87.	扳机扣压簧	fine adjustment
21. 外角螺帽	gunner	88.	扳机扣压簧	3/4 PMHO D=7.5
22. 扳机扣压片	gunner	89.	扳机扣压簧	fine adjustment lock
23. M3×8 KMHO	pistol lock	90.	扳机扣压簧	lock base
24. 扳机扣压片	pistol	91.	扳机扣压簧	fine adjustment base
25. 扳机扣压片	pistol	92.	扳机扣压簧	fine adjustment base
26. 扳机扣压片	pistol	93.	扳机扣压簧	fine adjustment base
27. 扳机扣压片	pistol	94.	扳机扣压簧	fine adjustment base
28. 扳机扣压片	pistol	95.	扳机扣压簧	fine adjustment base
29. 扳机扣压片	pistol	96.	扳机扣压簧	fine adjustment base
30. 扳机扣压片	pistol	97.	扳机扣压簧	fine adjustment base
31. 扳机扣压片	pistol	98.	扳机扣压簧	fine adjustment base
32. 扳机扣压片	pistol	99.	扳机扣压簧	fine adjustment base
33. 扳机扣压片	pistol	100.	扳机扣压簧	fine adjustment base
34. 扳机扣压片	pistol	101.	扳机扣压簧	fine adjustment base
35. 扳机扣压片	pistol	102.	扳机扣压簧	fine adjustment base
36. 扳机扣压片	pistol	103.	扳机扣压簧	fine adjustment base
37. 扳机扣压片	pistol	104.	扳机扣压簧	fine adjustment base
38. 扳机扣压片	pistol	105.	扳机扣压簧	fine adjustment base
39. 扳机扣压片	pistol	106.	扳机扣压簧	fine adjustment base
40. 扳机扣压片	pistol	107.	扳机扣压簧	fine adjustment base
41. 扳机扣压片	pistol	108.	扳机扣压簧	fine adjustment base
42. 扳机扣压片	pistol	109.	扳机扣压簧	fine adjustment base
43. 扳机扣压片	pistol	110.	扳机扣压簧	fine adjustment base
44. 扳机扣压片	pistol	111.	扳机扣压簧	fine adjustment base
45. 扳机扣压片	pistol	112.	扳机扣压簧	fine adjustment base
46. 扳机扣压片	pistol	113.	扳机扣压簧	fine adjustment base
47. 扳机扣压片	pistol	114.	扳机扣压簧	fine adjustment base
48. 扳机扣压片	pistol	115.	扳机扣压簧	fine adjustment base
49. 扳机扣压片	pistol	116.	扳机扣压簧	fine adjustment base
50. 扳机扣压片	pistol	117.	扳机扣压簧	fine adjustment base
51. 扳机扣压片	pistol	118.	扳机扣压簧	fine adjustment base
52. 扳机扣压片	pistol	119.	扳机扣压簧	fine adjustment base
53. 扳机扣压片	pistol	120.	扳机扣压簧	fine adjustment base
54. 扳机扣压片	pistol	121.	扳机扣压簧	fine adjustment base
55. 扳机扣压片	pistol	122.	扳机扣压簧	fine adjustment base
56. 扳机扣压片	pistol	123.	扳机扣压簧	fine adjustment base
57. 扳机扣压片	pistol	124.	扳机扣压簧	fine adjustment base
58. 扳机扣压片	pistol	125.	扳机扣压簧	fine adjustment base
59. 扳机扣压片	pistol	126.	扳机扣压簧	fine adjustment base
60. 扳机扣压片	pistol	127.	扳机扣压簧	fine adjustment base
61. 扳机扣压片	pistol	128.	扳机扣压簧	fine adjustment base
62. 扳机扣压片	pistol	129.	扳机扣压簧	fine adjustment base
63. 扳机扣压片	pistol	130.	扳机扣压簧	fine adjustment base
64. 扳机扣压片	pistol	131.	扳机扣压簧	fine adjustment base
65. 扳机扣压片	pistol	132.	扳机扣压簧	fine adjustment base
66. 扳机扣压片	pistol	133.	扳机扣压簧	fine adjustment base
67. 扳机扣压片	pistol	134.	扳机扣压簧	fine adjustment base
68. 扳机扣压片	pistol	135.	扳机扣压簧	fine adjustment base
69. 扳机扣压片	pistol	136.	扳机扣压簧	fine adjustment base
70. 扳机扣压片	pistol	137.	扳机扣压簧	fine adjustment base
71. 扳机扣压片	pistol	138.	扳机扣压簧	fine adjustment base
72. 扳机扣压片	pistol	139.	扳机扣压簧	fine adjustment base
73. 扳机扣压片	pistol	140.	扳机扣压簧	fine adjustment base
74. 扳机扣压片	pistol	141.	扳机扣压簧	fine adjustment base
75. 扳机扣压片	pistol	142.	扳机扣压簧	fine adjustment base
76. 扳机扣压片	pistol	143.	扳机扣压簧	fine adjustment base
77. 扳机扣压片	pistol	144.	扳机扣压簧	fine adjustment base
78. 扳机扣压片	pistol	145.	扳机扣压簧	fine adjustment base
79. 扳机扣压片	pistol	146.	扳机扣压簧	fine adjustment base
80. 扳机扣压片				

● Load the BB bullet
装入BB弹

Release the mag
卸下弹盒

用装弹器装入BB弹（约50发）
Load the BB bullet with BB loader (about 50 bbs)

● How to shoot
射击方法

As the Pic.5 show, stir up the puller then pull back it until be loaded
如图所示，将拉手向上拨，然后用力向后拉至上膛

图5

图4

图3

1. Install the mag.
装上子弹仓。

2. As the Pic.5 show, Stir up the puller then pull back it until it crack. At this motion the (puller/puller could not return by itself then push it back and revert the puller
如图5所示，将拉手向上拨，然后用力拉至上膛听到一声“咔嚓”声音，上膛装置已不能自然复位，再反向操作，推回原位

3. Attention:Never aim at a person or animal
扣动扳机，发射BB弹。（注意枪口不要对准人或动物）

● BB bullet regulator BB弹调整器
Adjust hop-up to keep the BB could shoot more far in the horizontal direction
shotlin
调整子弹调节器，保持水平方向射击能使BB弹获得最远射程。


图6

Hop-up (could be do it I ymove)
子弹调节器




警告

 Always wear eye protective gear. 玩枪时，请始终穿戴眼保护装置。




当使用汽枪射击目标或游戏时，你和所有的参与者都必须穿戴防护眼镜或其他眼保护装置。同时要注意子弹的弹射方向。（而且要特别注意不能射向游戏者以外的第三者。）

 You may be punished if you are shooting for a practical joke.
如果用汽枪弹开玩笑伤人，可能会受到惩罚。



 Never disassemble or modify the air gun. 避免拆除或修改该气枪。



Never look into the gun muzzle.
禁止直接目视枪口。

When shooting the air gun for a target or game, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. (Pay sufficient attention also to third personnel other than participants.)

You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

 
如果你损害公共的或私人的财产，或者伤害人、动物，即使你是在进行射击实践游戏，你也会受到惩罚。

请始终守规定，享受有益健康的运动射击。

This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance. So, avoid disassembling or modifying the air gun.

该气枪是根据适当的性能和操作而制造的。拆除或改装气枪可能产生危险或者不良影响，因此要避免拆除或改装该气枪。

Never shoot at any human or animal.
禁止射击人或动物。



Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle.
不可把人或动物当作目标瞄准或射击。

- Please read the instructions carefully before use. (Please read the Notice in details).
- Please retain the instructions for future reference.
- Don't use it improperly or refit the air gun.
- 使用前请先完整阅读说明书（注意部分请详细阅读）
- 保存好此说明书以供日后使用参照
- 切勿错误使用或改装气枪

Users restricted to 18 years of age or older 使用年龄对象18岁以上

CM.703 AIRSOFT GUN

INSTRUCTION MANUAL

使用说明书

在操作之前必需求读熟这些说明书
Always read through this manual before operation.

警告 WARNING

18岁以上年龄才能使用
Only for 18 years of age or older

18岁以上年龄才能利用这支枪比赛使用
Operation of this air gun for competition use is restricted to users of 18 years of age or older.

注意要谨慎
Injury caution

距离88 弹能打到54-60米范围, 不小心时射击有可能导致眼睛受伤或其它伤害
Since pellet: 88 bullets reach so to 60 meters, careless shooting may cause eye damage or other injuries.

注意请仔细阅读手册
Careful reading of
Handling cautions
and
Instruction manual

在操作之前要细心读熟警告手册和指示手册操作汽枪时必须仔细阅读警告指示
Always read through this HANDLING CAUTIONS and INSTRUCTION MANUAL carefully before operation.
Operate the air gun with full recognition of warnings and cautions.

[illegible]

2. 外罩前帽	barrel cover	70.	外罩后盖压圈	drivingspring stop
3. 外罩后盖	orange tip	71.	外罩后盖压圈	trigger safety spring
4. 外罩后盖压圈	barrel seal	72.	外罩后盖压圈	trigger safety
5. M3×8 KMH0	M3×8 KMH0	73.	外罩后盖压圈	trigger return spring
6. 弹匣	magazine	74.	外罩后盖压圈	trigger
7. M3×8 KMH0	magazine rubber	75.	外罩后盖压圈	trigger right base
8. 外罩后盖	magazine	76.	外罩后盖压圈	2.5×11.5 PMH0
9. 外罩后盖压圈	magazine	77.	外罩后盖压圈	patrol clock
10. 外罩后盖压圈	magazine adjustment	78.	外罩后盖压圈	right body
11. 2×6 KMH0	2×6 KMH0	79.	外罩后盖压圈	Mag base
12. 外罩后盖压圈	Magazine linker spring	79A.3×10 PMH0		3×10 PMH0
13. 外罩后盖压圈	Magazine adjustment 1	80.	外罩后盖压圈	Mag locker
14. 2×11.5 KMH0	2×11.5 KMH0	81.	外罩后盖压圈	Mag locker spring
15. 外罩后盖压圈	Magazine copper pipe locker	82.	外罩后盖压圈	Mag locker seal
16. 外罩后盖压圈	Magazine base	83.	外罩后盖压圈	chitin rest base
17. 外罩后盖压圈	Magazine copper pipe	84.	外罩后盖压圈	stock nut
18. 外罩后盖压圈	2.5×18 PMH0	85.	外罩后盖压圈	fine adjustment base
19. 外罩后盖压圈	bullet locker	86.	外罩后盖压圈	Mag-up fine adjustment O ring
20. 外罩后盖压圈	bullet locker spring	87.	外罩后盖压圈	fine adjustment
21. 外罩后盖压圈	barrel inner lock	88.	外罩后盖压圈	fine adjustment gear
22. 外罩后盖压圈	barrel set 2	89. 3×8 PVAH0 D=7.5		3/8 PVAH0 D=7.5
23. M3×8 KMH0	bullet locker	90.	外罩后盖压圈	fine adjustment lock
24. 外罩后盖压圈	bullet locker	91.	外罩后盖压圈	lock axle base
25. 外罩后盖压圈	bullet locker	92.	外罩后盖压圈	fine adjustment base
26. 外罩后盖压圈	bullet locker	93.	外罩后盖压圈	fine adjustment base
27. 外罩后盖压圈	bullet locker	94.	外罩后盖压圈	fine adjustment base
28. 外罩后盖压圈	bullet locker	95.	外罩后盖压圈	fine adjustment base
29. 外罩后盖压圈	bullet locker	96.	外罩后盖压圈	fine adjustment base
30. 外罩后盖压圈	bullet locker	97.	外罩后盖压圈	fine adjustment base
31. 外罩后盖压圈	bullet locker	98.	外罩后盖压圈	fine adjustment base
32. 外罩后盖压圈	bullet locker	99.	外罩后盖压圈	fine adjustment base
33. 外罩后盖压圈	bullet locker	100.	外罩后盖压圈	fine adjustment base
34. 外罩后盖压圈	bullet locker	101.	外罩后盖压圈	fine adjustment base
35. 外罩后盖压圈	bullet locker	102.	外罩后盖压圈	fine adjustment base
36. 外罩后盖压圈	bullet locker	103.	外罩后盖压圈	fine adjustment base
37. 外罩后盖压圈	bullet locker	104.	外罩后盖压圈	fine adjustment base
38. 外罩后盖压圈	bullet locker	105.	外罩后盖压圈	fine adjustment base
39. 外罩后盖压圈	bullet locker	106.	外罩后盖压圈	fine adjustment base
40. 外罩后盖压圈	bullet locker	107.	外罩后盖压圈	fine adjustment base
41. 外罩后盖压圈	bullet locker	108.	外罩后盖压圈	fine adjustment base
42. 外罩后盖压圈	bullet locker	109.	外罩后盖压圈	fine adjustment base
43. 外罩后盖压圈	bullet locker	110.	外罩后盖压圈	fine adjustment base
44. 外罩后盖压圈	bullet locker	111.	外罩后盖压圈	fine adjustment base
45. 外罩后盖压圈	bullet locker	112.	外罩后盖压圈	fine adjustment base
46. 外罩后盖压圈	bullet locker	113.	外罩后盖压圈	fine adjustment base
47. 外罩后盖压圈	bullet locker	114.	外罩后盖压圈	fine adjustment base
48. 外罩后盖压圈	bullet locker	115.	外罩后盖压圈	fine adjustment base
49. 外罩后盖压圈	bullet locker	116.	外罩后盖压圈	fine adjustment base
50. 外罩后盖压圈	bullet locker	117.	外罩后盖压圈	fine adjustment base
51. 外罩后盖压圈	bullet locker	118.	外罩后盖压圈	fine adjustment base
52. 外罩后盖压圈	bullet locker	119.	外罩后盖压圈	fine adjustment base
53. 外罩后盖压圈	bullet locker	120.	外罩后盖压圈	fine adjustment base
54. 外罩后盖压圈	bullet locker	121.	外罩后盖压圈	fine adjustment base
55. 外罩后盖压圈	bullet locker	122.	外罩后盖压圈	fine adjustment base
56. 外罩后盖压圈	bullet locker	123.	外罩后盖压圈	fine adjustment base
57. 外罩后盖压圈	bullet locker	124.	外罩后盖压圈	fine adjustment base
58. 外罩后盖压圈	bullet locker	125.	外罩后盖压圈	fine adjustment base
59. 外罩后盖压圈	bullet locker	126.	外罩后盖压圈	fine adjustment base
60. 外罩后盖压圈	bullet locker	127.	外罩后盖压圈	fine adjustment base
61. 外罩后盖压圈	bullet locker	128.	外罩后盖压圈	fine adjustment base
62. 外罩后盖压圈	bullet locker	129.	外罩后盖压圈	fine adjustment base
63. 外罩后盖压圈	bullet locker	130.	外罩后盖压圈	fine adjustment base
64. 外罩后盖压圈	bullet locker	131.	外罩后盖压圈	fine adjustment base
65. 外罩后盖压圈	bullet locker	132.	外罩后盖压圈	fine adjustment base
66. 外罩后盖压圈	bullet locker	133.	外罩后盖压圈	fine adjustment base
67. 外罩后盖压圈	bullet locker	134.	外罩后盖压圈	fine adjustment base
68. 外罩后盖压圈	bullet locker	135.	外罩后盖压圈	fine adjustment base
69. 外罩后盖压圈	bullet locker	136.	外罩后盖压圈	fine adjustment base
70. 外罩后盖压圈	bullet locker	137.	外罩后盖压圈	fine adjustment base
71. 外罩后盖压圈	bullet locker	138.	外罩后盖压圈	fine adjustment base
72. 外罩后盖压圈	bullet locker	139.	外罩后盖压圈	fine adjustment base
73. 外罩后盖压圈	bullet locker	140.	外罩后盖压圈	fine adjustment base
74. 外罩后盖压圈	bullet locker	141.	外罩后盖压圈	fine adjustment base
75. 外罩后盖压圈	bullet locker	142.	外罩后盖压圈	fine adjustment base</