SMT C2401 SERIES

USER GUIDE









Copyright Information

© Copyright 2020 Gunpower Co. Ltd. & ATS Co. Ltd Second Edition: July 2020 First Edition: March 2020

WARRANTY

Gunpower & ATS shall not be liable for technical or editorial errors or omissions contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. The information in this document is provided "as is" without warranty of any kind, including, but not limited to, the implied warranties of merchant ability and fitness for a particular purpose, and is subject to change without notice. The warranties for Gunpower & ATS products are set forth in the express limited warranty statements accompanying such products.

Nothing herein should be construed as constituting an additional warranty.

The information contained herein is subject to change without notice. The only warranties for Gunpower & ATS products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Gunpower & ATS shall not be liable for technical or editorial errors or omissions contained herein.

Guide Topics

- **1 Product Registration** ------ 04-05

3 Settings

A. Interface Descrip	otion	08
B. Manual Update		09
C. Factory Reset		10
D. Setting Reset		11
E. Sensor Check	:	12-13

4 Getting New Contents ------ 14-15

5 Connecting Multiple SMTs

A. Setting Up Multiple SMTs	16
B. Activating Multiple Suppo	rt Contents 17



1 Product Registration

SIGN IN	Product Build your range Projects Media,	HOME > SIGN IN	
	Member Log In		
	L og In		
	Forget Password		
	 Not a member yet? Storu so row and en/ov convenient features and benefits. 		
			CUNDOW/ED Inc
	4.Company Name *		GUNPOWER Inc. MODEL : IN PUT : Manufacturing date : Serial Number : 123456789
	4.Company Name * 5.Business Category		GUNPOWER Inc. MODEL : IN PUT : Manufarturing date : Serial Number : 123456789
	4.Company Name • 5.Business Category 5. Additional Informa		GUNPOWER Inc. MODEL : IN PUT : Manufacturing date : Serial Number : 123456789
	4.Company Name 5.Business Category 5. Additional Informa 5. Type of Retail Business	ation (ex: Firearms, Law Enforcement, Milita	GUNPOWER Inc. MODEL : IN PUT : Manufacturing date : Serial Number : 123456789 CEFECCE MADE IN KOREA
	4.Company Name 5.Business Category 5. Additional Informa 5. Type of Retail Business 5. How Did you Hear About Us?	ex: Firearms, Law Enforcement, Militation (ex: Firearms, Law Enforcement, Militation) (ex: Catalog Sales, Internet, Store From	GUNPOWER Inc. MODEL : IN PUT : Manufacturing date : Serial Number : 123456789 CEFECEE MADE IN KOREA

Access http://www.gunpower.com and join a membership.

- Scroll down and enter the serial number listed on the back of the product in 'Product Serial' at line 5.
- If there are two or more products, Enter a serial number of one product and enter a serial number of other product.

1 Product Registration



• Product can be registered again at setting.





 After reviewing warning, Select 'AGREE' button[●]



Recent FAVORITES A-Z				
	COMMAND I	۲		
6 7 3	COMMAND II			
	AIMING			
	CRIMINAL			
	FLIP FLOP			
2	HOSTAGE			
	SHOT TIMER			
	SIGNAL			
	TARGET			
MULTI	TRAINING			





A. Interface Description



3

Settings



B. Manual Update



• Select the MANUAL UPDATE button to check for updates, then select the OK button to import the updates.



C. Factory Reset



- Proceed with factory reset by selecting 'FACTORY RESET' button in settings.
- Factory reset takes place as follows when selecting 'OK' button.
- Factory reset may take few minutes or up to less than an hour.
- Selecting 'CLOSE' button goes back to settings.
- **※** Previously purchased contents are deleted.



D. Setting Reset



• Select the SETTING RESET button and select the OK button to reset the setting.

3 Settings

E. Sensor Check

SETTINGS	
LANGUAGE	ENG •
SENSOR REVERSE	
MANUAL UPDA	TE
PRODUCT REGISTR	ATION
SHOT POINT SIZE	
	30
SOUND VOLUME	
FACTORY RESET SETTING RESET	SENSOR CHECK
SAVE	СР

Check sensor by selecting
 'SENSOR CHECK' button in settings.

E. Sensor Check



3

Settings

SCREEN SCREEN Sensor : Connect Sensor : Connect SHOOT TOWARDS ARCADE BUTTON THE SCREEN CHECK RESULT OR OUADRANGLE BUTTON OK PRESS THE ARCADE BUTTON. ARCADE ARCADE Arcade : Disconnect Arcade : Disconnect Ţ ľ Prior to check Normal

Detection Sensor Check

Clicking 'SENSOR CHECK' button displays as the image on the left. At this time, SMT detection sensor condition can be checked by Shooting at the screen.

(When there is an error, it displays as the image on the right.)

Arcade Box Check

Selecting 'SENSOR CHECK' button displays as the image on the left. At this time, Arcade Box condition can be checked by Controlling Arcade Box. (When there is an error, it would not light up even the button is selected.)

4 Getting New Contents

SIGNAL SOFTWARE SIGNAL SOFTWARE Product Name Own label brand Brand 104.5 018.61 MSRP USD 4.99 Product Code P00000EP Product promotion via fE SNS Purchase Contents (Minimum Order: 1 or more) After logging in on the website, Select quantity. Select the desired contents in Product – Software, HOME RE TRY SIGNAL SOFTWARE SCORE A WESTENALTY And click 'Buy Now' to make a purchase. **Downloading contents requires** Total(Quantity): USD 4.99 (1 item(s)) Roll over to zoom 'Product Registration' before and after purchase. Add to Add to cart Buy now Wish list Q Zoom < Previous Next > I Thank you for shopping with us. gunpowertest, your membership level is [Distributor]. Please enjoy 50% Additional discount is on purchases over bank deposit USD 1.00 or more.

4 Getting New Contents

SETTINGS	
LANGUAGE	ENG 🔻
SENSOR REVERSE	
MANUAL UPDATE	
PRODUCT REGISTRATI	ON
SHOT POINT SIZE	50
SOUND VOLUME	30
FACTORY RESET SETTING RESET	SENSOR CHECK
SAVE	CP

Download Purchased Contents

When product registration and content purchase are completed, Select 'MANUAL UPDATE' button in settings, And proceed with update to download contents in SMT.

5 Connecting Multiple SMTs

A. Setting Up Multiple SMTs



* Router, LAN cable shall be purchased separately

5 Connecting Multiple SMTs

B. Activating Multiple Support Contents





After you connect all the units, please find contents indicated 'MULTI' among contents. When you select MULTI contents, it requires a master unit to activated as 'MULTI' and the other units are automatically designated as 'Slaves'. If some of units are not activated as 'Slaves', please follow the steps below.

- Checking LAN cable connection and router status (all LAN cable ports should be blinking)
- **2** Turn off all the SMTs.
- **3** Restart your router.
- **4** Turn on all the SMTs.
- 5 Activate MASTER unit.

Once all the SMT units are set up, slave unit cannot be used independently.

Going back to individual SMT units. (Turning off multiple SMT function) Simply move back to 'CP' page on MASTER units and other SLAVE units as well.