
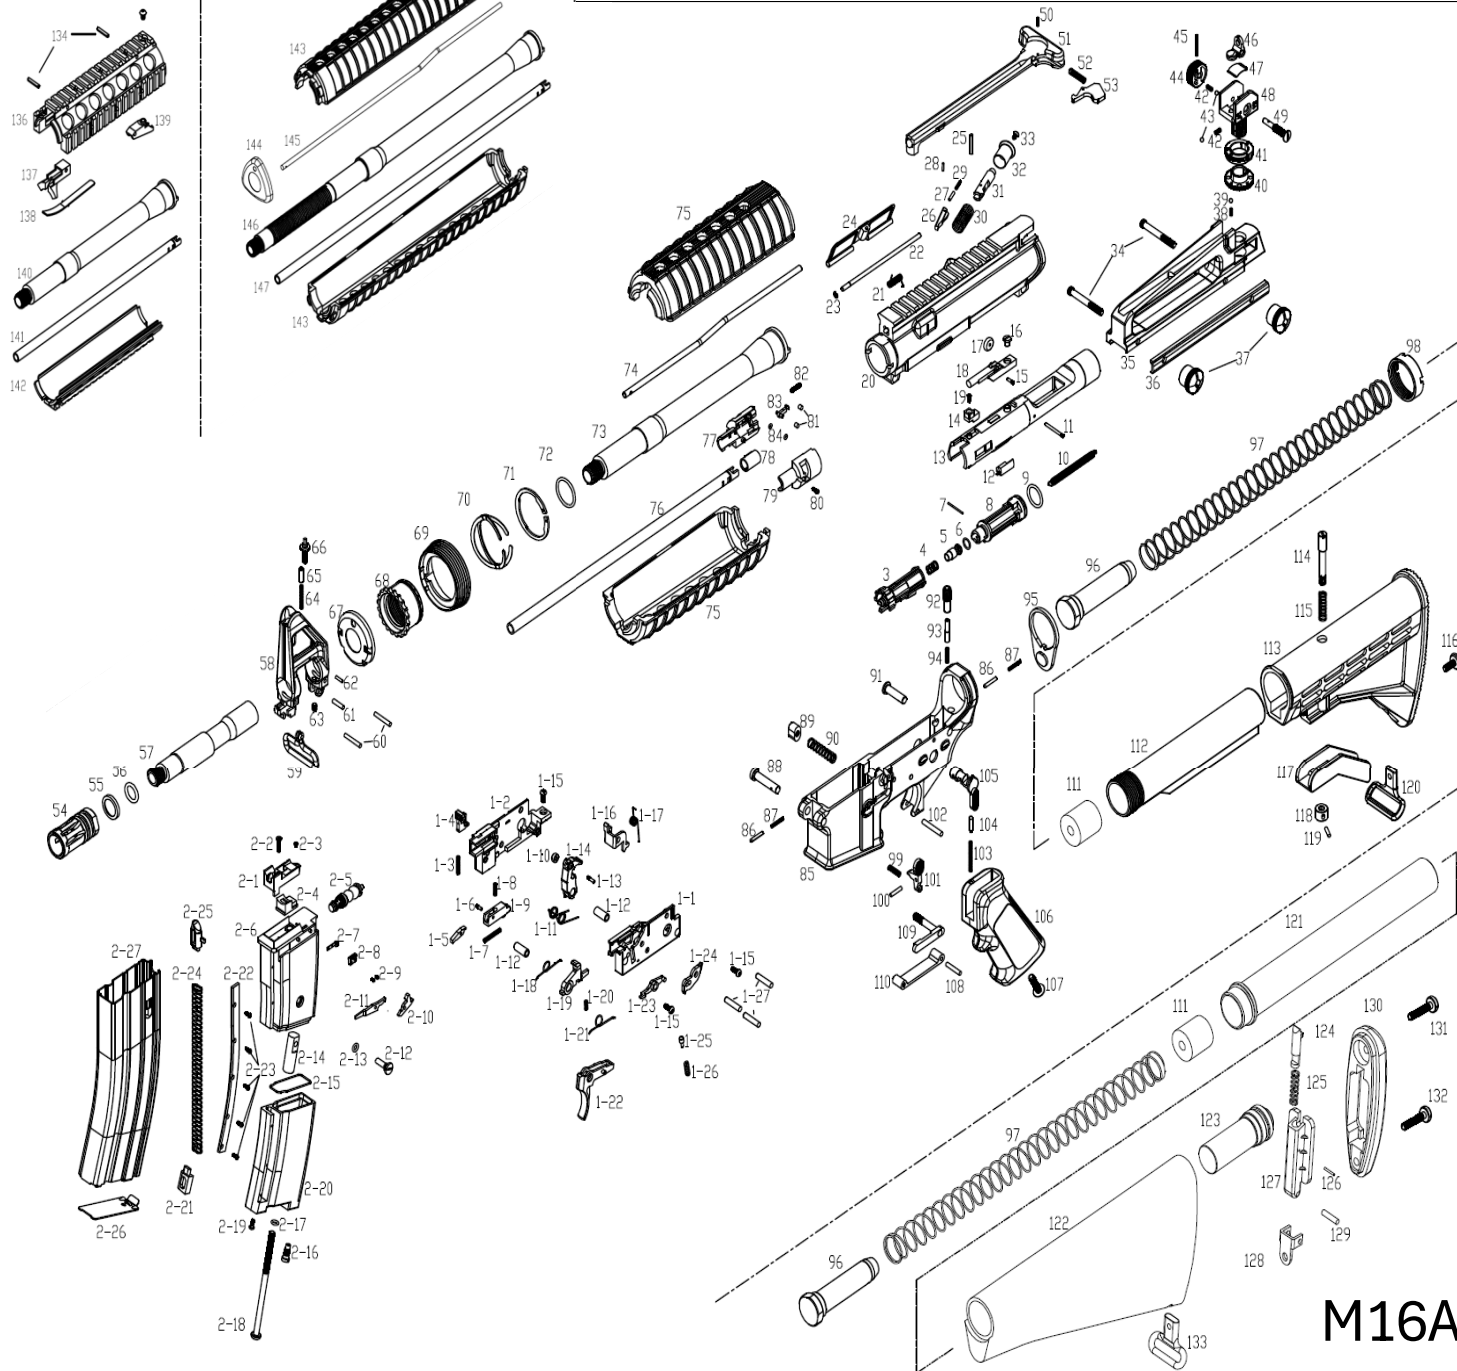
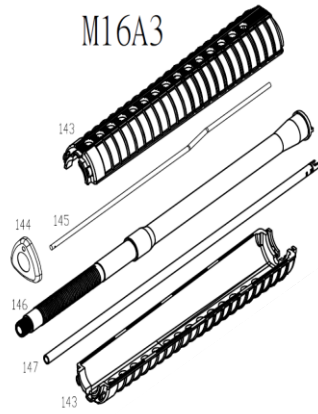


Part No.	Chinese name	English Name	Part No.	Chinese name	English Name	Part No.	Chinese name	English Name
1-1	扳機擊錘(左)	Trigger Hammer (Left)	16	槍機滾輪座螺絲	Bolt Carrier Roller Screw	83	HOPUP調整連桿	HOPUP Adjustment Rod
1-2	扳機擊錘(右)	Trigger Hammer (Right)	17	槍機滾輪	Bolt Carrier Roller	84	O環2X1	O-ring 2X1
1-3	延遲器彈簧	Delay Spring	18	槍機滾輪座	Bolt Carrier Roller Base	85	下槍身	Lower Receiver
1-4	延遲器	Delayer	19	M2X7平頭	M2X7 Flat Head Screw	86	插銷	Pin
1-5	撞針	Firing Pin	20	上槍身	Upper Receiver	87	插銷彈簧	Pin Spring
1-6	PIN2X6	PIN 2X6	21	防塵蓋扭簧	Dust Cover Torsion Spring	88	前插銷	Front Pin
1-7	撞針座覆進簧	Firing Pin Housing Return Spring	22	防塵蓋軸	Dust Cover Shaft	89	彈匣-卡榫按鈕	Magazine Catch Button
1-8	撞針彈簧	Firing Pin Spring	23	2MME扣	2MM E-clip	90	退彈扭彈簧	Magazine Release Spring
1-9	撞針座	Firing Pin Housing	24	防塵蓋	Dust Cover	91	後插銷	Rear Pin
1-10	擊錘滾輪	Hammer Roller	25	PIN2.5X16.7	PIN 2.5X16.7	92	覆進桿定位軸螺絲	Buffer Tube Lock Screw
1-11	擊錘扭簧	Hammer Torsion Spring	26	助進器推桿	Forward Assist Rod	93	覆進桿定位軸	Buffer Tube Lock Shaft
1-12	擊錘軸套	Hammer Bushing	27	PIN2X10	PIN 2X10	94	覆進桿定位軸彈簧	Buffer Tube Lock Spring
1-13	PIN2X8	PIN 2X8	28	PIN1.5X6.5	PIN 1.5X6.5	95	槍托固定環	Stock Retaining Ring
1-14	擊錘	Hammer	29	助進器推桿彈簧	Forward Assist Rod Spring	96	緩衝軸	Buffer Shaft
1-15	M3X8九頭十字	M3X8 Round Head Phillips Screw	30	助進器彈簧		97	覆進彈簧	Recoil Spring
1-16	擊錘開閉器	Hammer Release Lever	31	助進器推桿座	Forward Assist Rod Base	98	槍托定位環	Stock Locator Ring
1-17	擊錘開閉器扭簧	Hammer Release Torsion Spring	32	助進器	Forward Assist	99	槍機釋放彈簧	Bolt Release Spring
1-18	扳機彈簧(右)	Trigger Spring (Right)	33	M2.5X6平頭螺絲	M2.5X6 Flat Head Screw	100	PIN2.5X13.3	PIN 2.5X13.3
1-19	副扳機	Secondary Trigger	34	上握把螺絲	Carry Handle Screw	101	槍機釋放扭	Bolt Release Lever
1-20	副扳機彈簧	Secondary Trigger Spring	35	上握把	Carry Handle	102	PIN3.5X23	PIN 3.5X23
1-21	扳機彈簧(左)	Trigger Spring (Left)	36	上握把夾片	Carry Handle Clip	103	保險定位頂針彈簧	Safety Detent Spring
1-22	扳機	Trigger	37	上握把螺帽	Carry Handle Nut	104	保險定位頂針	Safety Detent
1-23	後定附件(前)	Rear Detent Attachment (Front)	38	照門高低調整下彈簧	Rear Sight Height Adjustment Spring	105	保險扭	Safety Selector
1-24	後定附件(後)	Rear Detent Attachment (Rear)	39	2.5MM鋼珠	2.5MM Steel Ball	106	握把	Grip
1-25	後定附件後緩衝軸	Rear Detent Buffer Rod	40	照門高低調整下盤	Rear Sight Height Adjustment Lower Plate	107	M5X20傘頭	M5X20 Pan Head Screw
1-26	後定附件後緩衝彈簧	Rear Detent Buffer Spring	41	照門高低調整上盤	Rear Sight Height Adjustment Upper Plate	108	PIN3X16.8	PIN 3X16.8
1-27	PIN4X18.2	PIN 4X18.2	42	照門調整扭彈簧	Rear Sight Adjustment Spring	109	彈匣卡榫	Magazine Catch
2-1	氣道橡膠座	Gas Route Rubber Base	43	3MM鋼珠	3MM Steel Ball	110	護弓	Trigger Guard
2-2	M2.5X12平頭十字	M2.5X12 Flat Head Phillips Screw	44	照門左右調整扭	Rear Sight Windage Adjustment Knob	111	緩衝桿	Buffer Rod
2-3	M2X3平頭十字	M2X3 Flat Head Phillips Screw	45	照門左右調整扭固定柄	Rear Sight Windage Lock Pin	112	伸縮托桿	Retractable Stock Rod
2-4	氣道橡膠	Gas Route Rubber	46	照門	Rear Sight	113	伸縮托	Retractable Stock
2-5	氣閥	Gas Valve	47	照門彈片	Rear Sight Leaf Spring	114	伸縮托定位柱	Retractable Stock Lock Post
2-6	彈匣本體上	Magazine Body Upper	48	照門座	Rear Sight Base	115	伸縮定位柱彈簧	Retractable Stock Lock Post Spring
2-7	彈匣撥桿調整鈕彈片	Magazine Lever Adjust Button Spring Plate	49	照門左右調整螺絲	Rear Sight Windage Adjustment Screw	116	伸縮托背帶環螺絲	Retractable Stock Sling Loop Screw
2-8	彈匣撥桿調整鈕	Magazine Lever Adjust Button	50	PIN1.5X7.5	PIN 1.5X7.5	117	伸縮托卡榫	Retractable Stock Lock
2-9	M1.4X3自攻	M1.4X3 Self-tapping Screw	51	槍機拉柄	Charging Handle	118	伸縮托螺母	Retractable Stock Nut
2-10	彈匣撥桿後	Magazine Lever Rear	52	槍機拉柄夾片彈簧	Charging Handle Clip Spring	119	PIN2.5X10	PIN 2.5X10
2-11	彈匣撥桿前	Magazine Lever Front	53	槍機拉柄夾片	Charging Handle Clip	120	伸縮托背帶環	Retractable Stock Sling Loop
2-12	彈匣本體結合梢螺絲	Magazine Body Joint Pin Screw	54	防火帽	Flash Hider	121	M16A3固定托桿	M16A3 Fixed Stock Rod
2-13	O環4X1.2	O-ring 4X1.2	55	防火帽墊片	Flash Hider Washer	122	M16A3 3固定托	M16A3 Fixed Stock
2-14	彈匣本體結合梢	Magazine Body Joint Pin	56	O環12.5X2.5	O-ring 12.5X2.5	123	固定托底桿子座	Fixed Stock End Rod Base
2-15	O型環25X1.2	O-ring 25X1.2	57	M4外管前段	Outer Barrel Front Section	124	槍托底板卡榫	Stock End Plate Lock
2-16	灌嘴	Filling Nozzle	58	三角準星座	Triangle Front Sight Base	125	槍托底板卡榫彈簧	Stock End Plate Lock Spring
2-17	O環4X2	O-ring 4X2	59	前背帶環	Front Sling Swivel	126	PIN1.5X12	PIN 1.5X12
2-18	M5X85螺絲	M5X85 Screw	60	三角準星座插榫	Triangle Front Sight Base Pin	127	槍托底板	Stock End Plate
2-19	M2.5X6圓頭	M2.5X6 Round Head	61	前背帶環插榫	Front Sling Swivel Pin	128	槍托底板固定片	Stock End Plate Fixing Tab
2-20	彈匣本體下	Magazine Body Lower	62	瓦斯導管插銷	Gas Tube Pin	129	PIN4X18	PIN 4X18
2-21	彈匣彈簧擋塊	Magazine Spring Stop Block	63	止付螺絲M4X4	Set Screw M4X4	130	槍托	Stock
2-22	上彈頭蓋	Feeding Head Cap	64	準星卡榫彈簧	Front Sight Detent Spring	131	槍托底板螺絲上	Stock End Screw (Upper)
2-23	M2X5自攻	M2X5 Self-tapping Screw	65	準星卡榫	Front Sight Detent	132	槍托底板螺絲下	Stock End Screw (Lower)
2-24	上彈頭彈簧	Feeding Head Spring	66	準星	Front Sight	133	槍托背帶環	Stock Sling Loop
2-25	上彈頭	Feeding Head	67	護目前籠	Handguard Cap Front	134	SPIN3X16	SPIN 3X16
2-26	彈匣底蓋	Magazine Bottom Cap	68	槍管固定環	Barrel Retaining Ring	135	傘頭內六角M4X6	Inner Hex Pan Head M4X6
2-27	彈匣外殼	Magazine Outer Shell	69	護木後箍	Handguard Cap Rear	136	魚骨護木上	Top RIS Rail
3	活塞前	Piston Front	70	護木後箍彈簧片	Handguard Cap Rear Spring Plate	137	魚骨護木上彈片座	Top RIS Plate Seat
4	調節閥彈簧	Regulator Spring	71	護木後箍扣環	Handguard Cap Rear Clip	138	魚骨護木上彈片	Top RIS Plate
5	調節閥	Regulator	72	O環20X2	O-ring 20X2	139	魚骨護木上固定螺絲座	Top RIS Screw Seat
6	O環7X1	O-ring 7X1	73	M4/CQB/M16A3外管	Outer Barrel for M4/CQB/M16A3	140	M4-CQB外管(鋼製)	M4-CQB Outer Barrel (Steel)
7	PIN1X18.5	PIN 1X18.5	74	M4瓦斯導管	M4 Gas Tube	141	M4-CQB內管	M4-CQB Inner Barrel
8	活塞後	Piston Rear	75	M4A1護木	M4A1 Handguard	142	魚骨護木下	Bottom RIS Rail
9	O環14.8X2	O-ring 14.8X2	76	M4內槍管	M4 Inner Barrel	143	M16A3護木	M16A3 Handguard
10	活塞拉環	Piston Pull Ring	77	槍管座-右	Barrel Base - Right	144	三角護木前籠	Triangle Handguard Cap Front
11	PIN2X22.8	PIN 2X22.8	78	入彈膠	Hop Rubber	145	M16A瓦斯導管	M16A Gas Tube
12	活塞穩定器	Piston Stabilizer	79	槍管座-左	Barrel Base - Left	146	M16A3外管	M16A3 Outer Barrel
13	槍機	Bolt Carrier	80	M2X6圓頭十字	M2X6 Round Head Phillips	147	M16A3內管	M16A3 Inner Barrel
14	活塞穩定器上	Piston Stabilizer Upper	81	橡膠3X3MM	Rubber 3X3MM			
15	PIN2X7.5	PIN 2X7.5	82	M2.5X12止付螺絲	M2.5X12 Set Screw			

CQB

M16A3

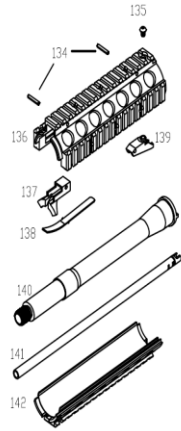

M16A